


Step # 2:
Center slope tops on lockers
Drill hole at 45 degrees into the
top of the locks and screw
into place

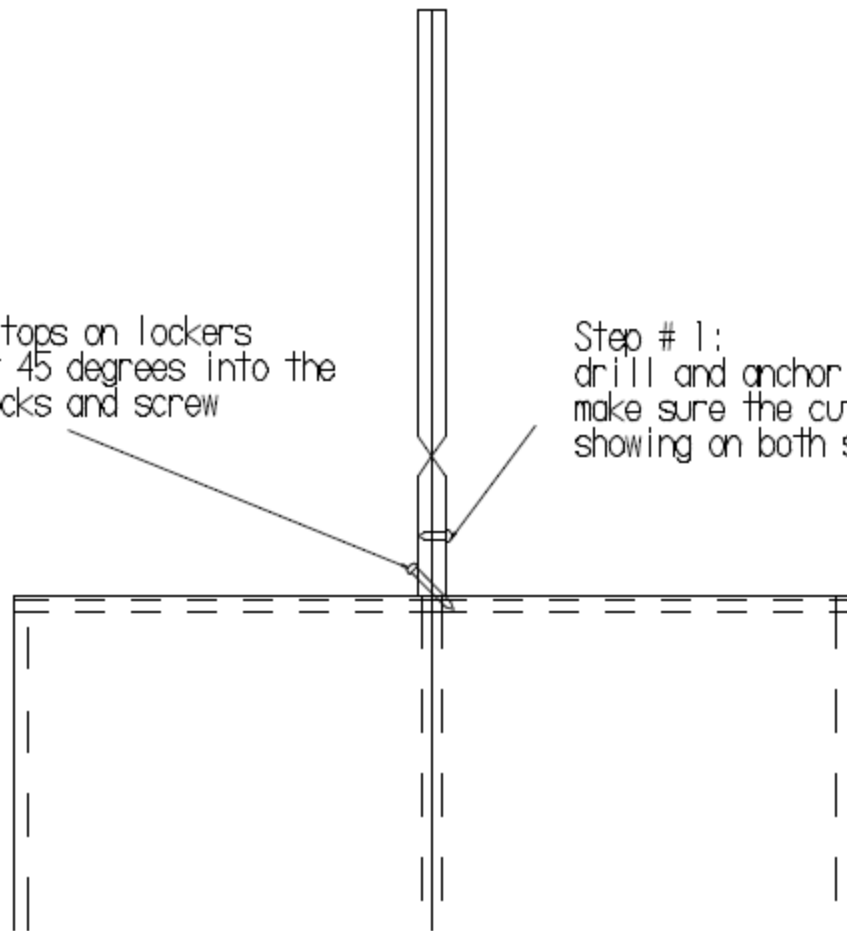

Step # 1:
drill and anchor slope tops together
make sure the cut to allow the fold is
showing on both sides

Step # 3:
Fold the tops down to meet the lockers
Drill up through the top of the locker into
the slope top, 3' from the front of the locker
Secure with provided screw.

